

**EVOCHARGE®**

# EVOCHARGE® Concealed 6-inch Pedestal

---

## User Installation Guide

Revision A



# Maintenance and Safety:

## IMPORTANT SAFETY INSTRUCTIONS - PLEASE DO NOT DISCARD THESE INSTRUCTIONS

READ THE INSTRUCTIONS COMPLETELY. FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS MAY RESULT IN PROPERTY DAMAGE, INJURY, OR DEATH. THE MANUFACTURER ASSUMES NO LIABILITY FOR CLAIMS RESULTING FROM THIS.

DANGERS, WARNINGS, CAUTIONS, AND NOTICES ARE DEFINED PER ANSI Z535



**DANGER:** TO AVOID FIRE, SHOCK, OR DEATH: TURN OFF POWER AT CIRCUIT BREAKER OR FUSE AND TEST THAT POWER IS OFF BEFORE WIRING



**WARNING:** ELECTRIC SHOCK: NO OPERATOR SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL



**WARNING:** VERIFY WITH LOCAL AUTHORITIES THAT THE LOCATION WHERE THE PEDESTAL IS TO BE INSTALLED IS FREE FROM UNDERGROUND PIPLINES OR ELECTRICAL EQUIPMENT



**WARNING:** DO NOT USE THIS PRODUCT IF INPUT POWER WIRES IS FRAYED, BROKEN INSULATION, OR ANY OTHER SIGNS OF DAMAGE



**CAUTION:** THE ELECTRICAL VEHICLE SUPPLY EQUIPMENT (EVSE) PEDESTAL MUST BE WIRED PER THE NATIONAL ELECTRICAL CODE (NEC) AND LOCAL CODES



**CAUTION:** THE EVSE CHARGING STATION AND ELECTRICAL WIRING SHOULD BE INSTALLED BY AN ELECTRICIAN IN ACCORDANCE WITH THE LOCAL ELECTRICAL CODES AND REGULATIONS



**CAUTION:** GROUNDING: TO ENSURE THE SAFE OPERATION OF THE PEDESTAL, IT MUST BE CONNECTED TO A GROUNDING CIRCUIT COMPLIANT WITH LOCAL BUILDING CODES



**CAUTION:** HANDLE PARTS WITH CARE. ALWAYS USE PROPER PERSONAL PROTECTIVE EQUIPMENT (PPE) DURING THE INSTALLATION

### NOTICE

RUN DEDICATED BRANCH CIRCUITS (ONE BREAKER PER EVSE CHARGING STATION), AS PER NEC 625 AND LOCAL BUILDING CODES

### NOTICE

WHEN MOUNTING THE PEDESTAL IN PARKING SPACES OR PARKING GARAGES, APPROPRIATE ANTI-COLLISION PROTECTION MUST BE INSTALLED. REFERENCE LOCAL BUILDING CODES

### NOTICE

TO ENSURE THAT THE EVSE CHARGING STATION AND PEDESTAL ARE INSTALLED PER AMERICANS WITH DISABILITIES ACT (ADA) STANDARDS FOR ACCESSIBLE DESIGN GUIDELINES, REFER TO CODE OF FEDERAL REGULATIONS DOCUMENT 28 CFR PART 36, SECTIONS 4.2 AND 4.4


### NOTICE

IF YOU HAVE QUESTIONS ABOUT THE INSTALLATION, CONTACT EVOCHARGE TECHNICAL SUPPORT. IF YOU ARE UNSURE ABOUT A PROCEDURE DO NOT ATTEMPT TO PERFORM IT

### NOTICE

THIS INSTALLATION INSTRUCTIONS SOLELY FOR THE PEDESTAL. DEPICTIONS OF THE EVOCHARGE EVSE ARE FOR REFERENCE ONLY. REFER TO THE EVOCHARGE EVSE INSTALLATION MANUAL INCLUDED WITH CHARGER UNIT OR AVAILABLE ON EVOCHARGE.COM



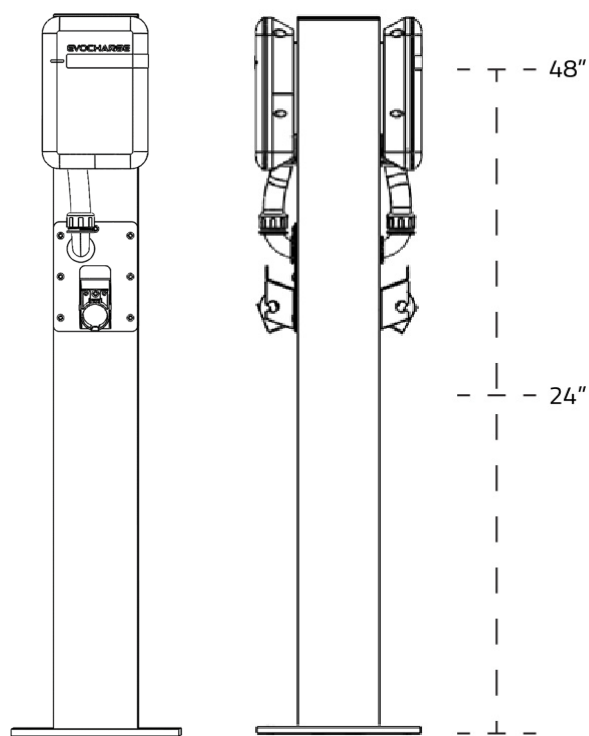


## Technical Data and Specifications










### Standards and Certifications:

Compliant with Americans with Disabilities Act (ADA) recommended charger connect height of less than 48" and greater than 24"

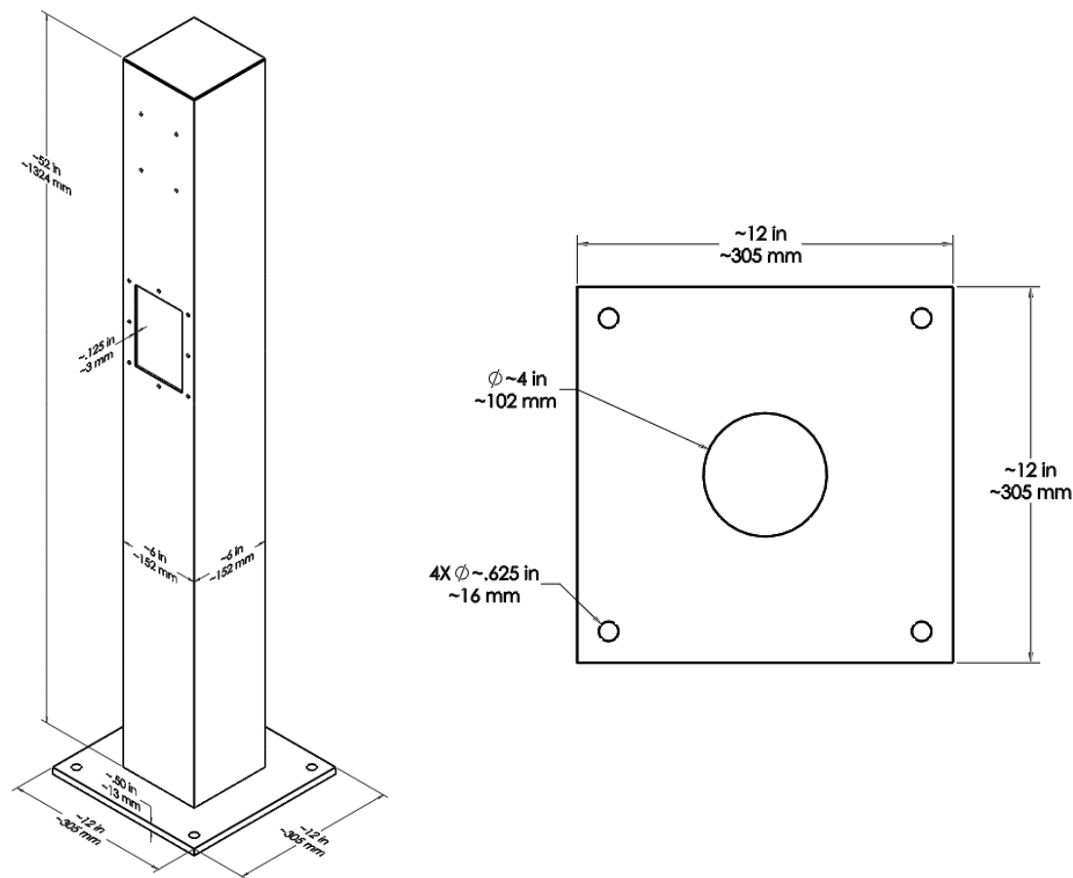Description	Specification
<b>Weight lbs. [kg]</b>	
Pedestal	25 [12]
<b>Enclosure</b>	
Material	Aluminum
<b>Approximate Dimensions Inches [mm]</b>	
Height x Width x Depth	52 [1324] x 6 [152] x 6 [152]; Base:12 [305] x 12 [305]
Wall Thickness	0.125 [3]
Distance Between Center of Mounting Holes	10 [254]



Included Parts and Required Tools (Single charger install)

	QTY:  1		QTY:  1		QTY:  4
	1		19		11
	1		1		1

Required Tools (Not Included): T30 & T20 Torx Bit, 7/16" & 1/2" Socket/Ratchet, and Torque Wrench

Additional Parts Required (Not Included): EVSE, Stainless Steel Anchor Bolts, Stainless Steel Hex Nuts and Washer, 1-inch x 90-Degree and Straight\* Liquid Tight Adaptor, 1-inch Flexible Liquid Tight, and Silicone Sealant

\* Part is not referenced in this installation manual. Refer to EVSE installation manual.

## Pedestal Installation

### Anchor and Conductor Installation Wet Concrete:

The installer can use a prefabricated anchor included with the installation kit offered by EvoCharge (EVC0901) or use stainless steel L or J type anchor bolts with a diameter no greater than ½ inch. Reference Figure 2 for bolt spacing.

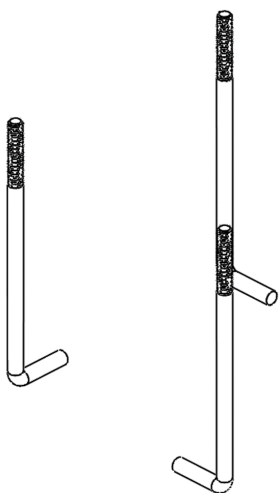


Fig. 1: Concrete Anchors Configuration

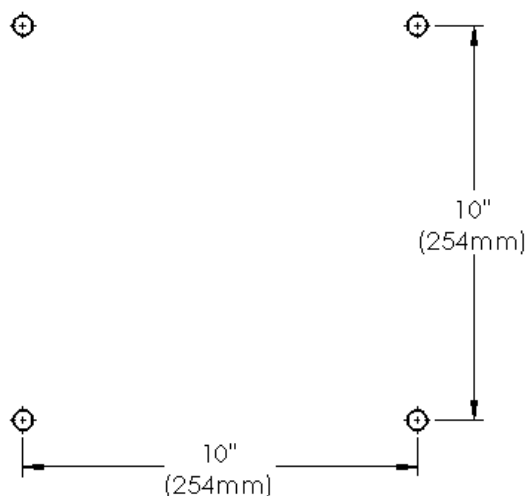


Fig. 2: Bolt Spacing

The requirements below are the manufacturer's minimum recommendations only. The location, dimensions, and composition of the concrete pad for supporting the pedestal should always comply with local building codes.

Use an electrical conduit of the appropriate size to bring the electrical cables to the center of the concrete anchors. Pull conductors from the service equipment to the pedestal installation site, leaving 5 feet of wire exposed. Reference Figure 3.

Hex nuts and washers are to be placed on the anchor bolts below the pedestal to adjust the vertical alignment, should the concrete pad not be level. A gap will be present between the concrete pad and pedestal base. Seal the gap with silicone sealant. Apply silicone per the manufacturer's recommendations. Reference Figure 4.

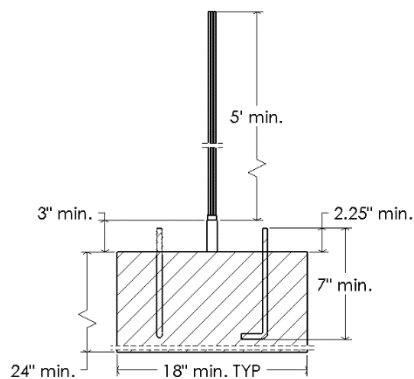


Fig. 3: Concrete Base

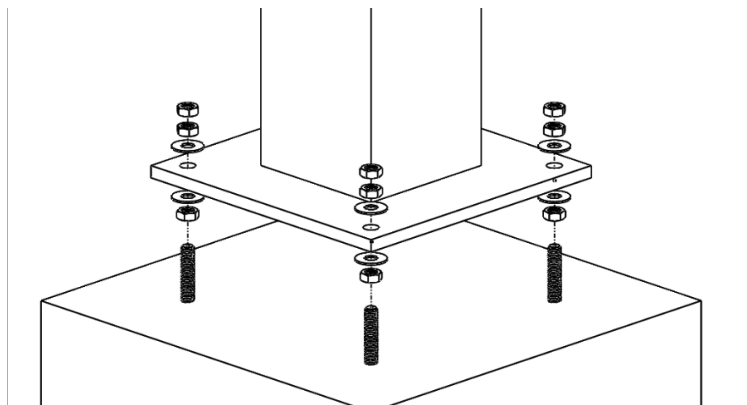


Fig. 4: Recommended Washer and Nut configuration

**Grounding:** Verify grounding requirements with state, local, and national electrical codes and standards.

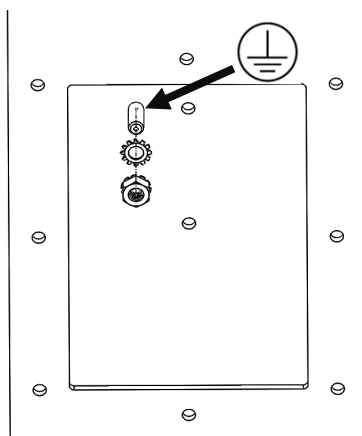


Fig. 5: Grounding Connection Configuration (Tighten Lock Nut to 45 inch-pounds)

### Pedestal Assembly:

Conduit and Liquid Tight Adaptors are sold separately in the installation kit (EVC9001). Insert the 90-degree Liquid Tight Adaptor into the access cover, as shown in Figure 7 (left). Tighten the locking nut to manufacturer's recommend torque value. When installing the thread forming screws, follow the sequence in Figure 9 and tighten all screws to 13 inch-pounds.

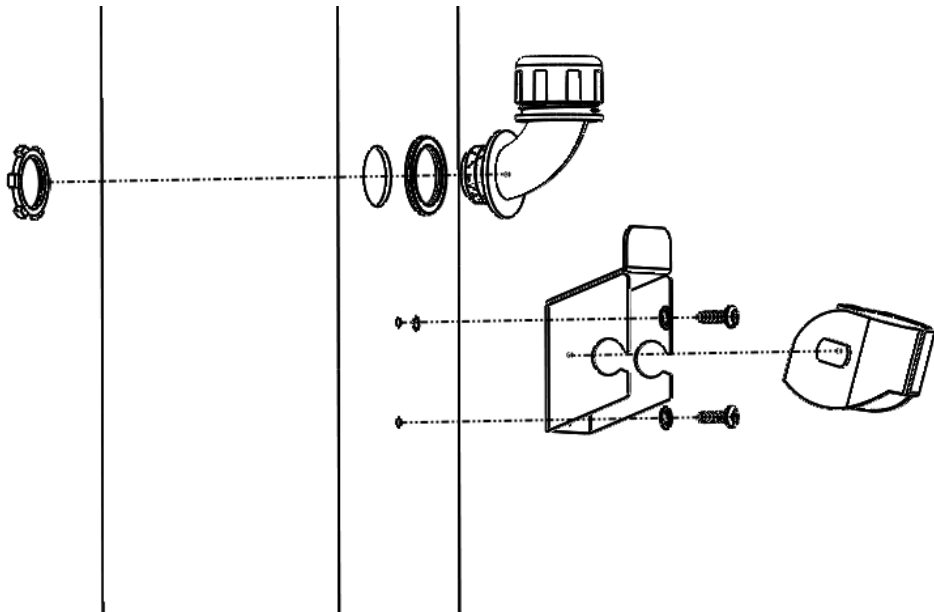


Fig. 6: Installation of Liquid Tight Adaptors and EVSE Cable Holster

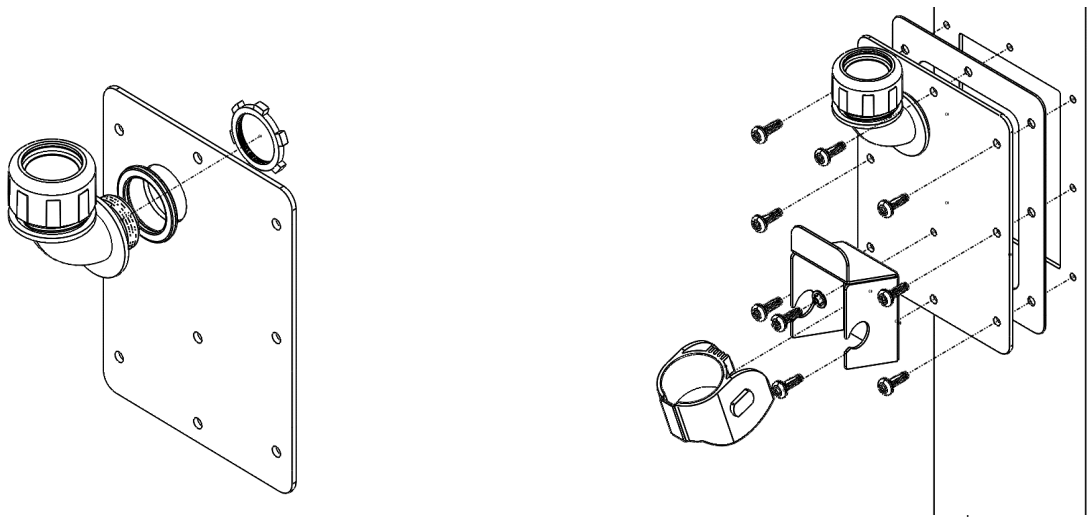


Fig. 7: Access Cover Installation with Second EVSE

## Installing Access Panel for Single EVSE Installation:

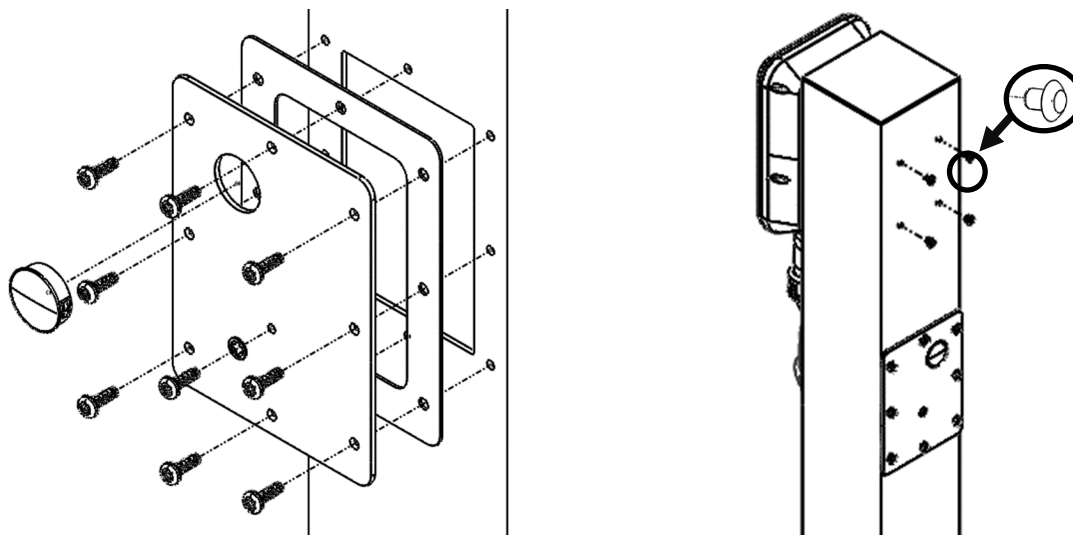


Fig. 8: Single EVSE Installation

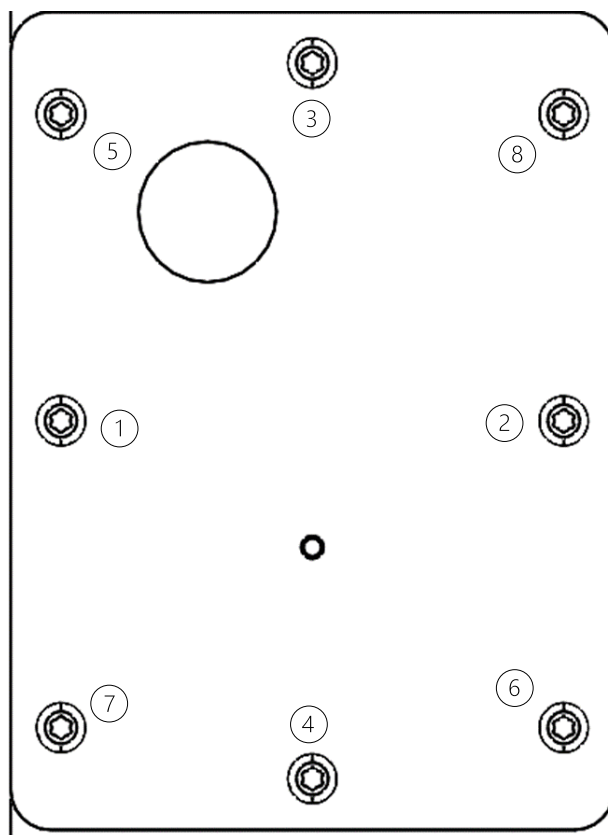


Fig. 9: Order For Fastening Screws (Tighten to 13 inch-pounds)



## Mounting EVSE:

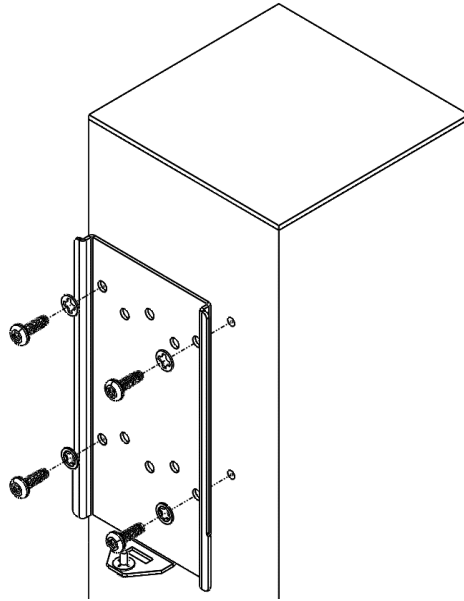


Fig 10: Install Mounting Bracket (Tighten to 13 inch-pounds)


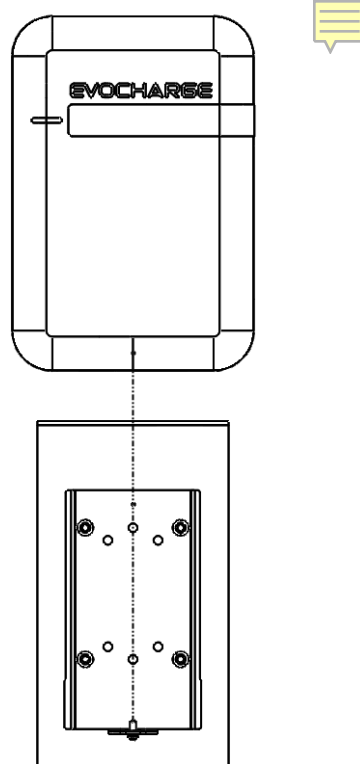


Fig 11: Slide the EVSE Onto the Mounting Bracket

### **Install Conduit:**

Use the fabricated conduit included with the installation kit (EVC0901). Otherwise, cut the Flexible Liquid Tight Conduit to the required length to properly engage adaptors.

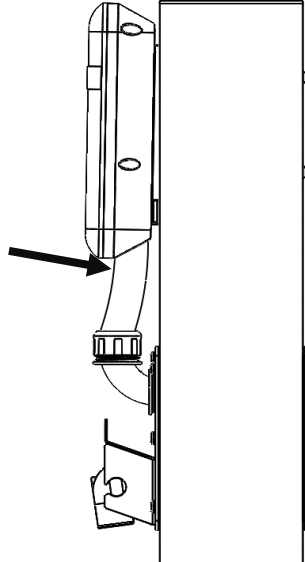

### **Warranty**

The EvoCharge warranty statement is located on the website at [evocharge.com/warranty](https://evocharge.com/warranty)